
 


- □SLP-EXT-HB-24
- □SLP-EXT-HB-46
- □SLP-EXT-HB-92

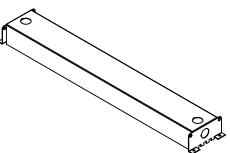



END CAP

□ ALB-ENDCAP

END PLUG

□ CT-ENDPLUG-B





1/2 HUB □ CT-DCB-.5



#6 TYPE B ROUND HEAD THREADING SCREW

ASSCT2



#8 TYPE B X .25 ROUND HEAD THREADING SCREW SLP-8BRH-25-ZP



#8 TYPE B X .25 FLAT HEAD THREADING SCREW

SLP-8BFH-25-ZP



#8-32 X .25 ROUND HEAD MACHINE SCREW SLP-832RH-25-ZP

EXTRUDED DIFFUSER

- □ALB-EXT-PC-46-CLR
- □ ALB-EXT-PC-46-FST
- □ALB-EXT-PC-46-WHT
- □ALB-EXT-AC-46-CLR
- □ALB-EXT-AC-46-FST
- □ALB-EXT-AC-46-WHT



CABLE MOUNTING BRACKET

ALB-CABLEBKT




#8-32 HEX NUT □SLP-832HN-ZP

ASSEMBLY GUIDE

Page <u>1</u> of <u>2</u>

SIP

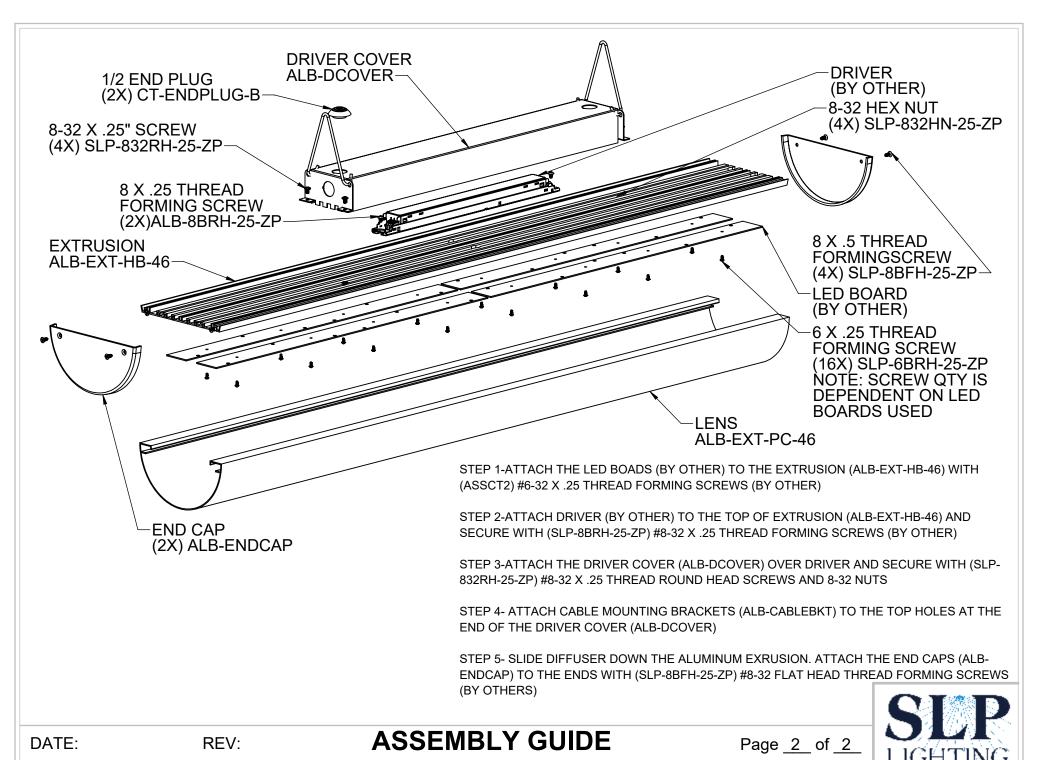

1400 South Old Highway 141 Fenton, MO 63026

PH (636) 600-4084 FX (636) 600-4106 www.SLPlighting.com