


Installation Sheet

*1. Install LED Boards Under Lance:

The metal tray lance must be aligned with the LED board mounting holes.

Holding the board at a slight angle slide the board under the boardtray lance and lay flat

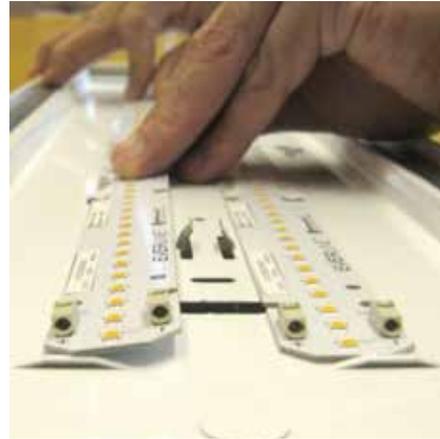


*2. Install Boardtray Retention Clip:

Push clip into the slot until it snaps



To Remove Boardtray Retention Clip:

From the backside of the boardtray pinch the clip together push out of the slot.

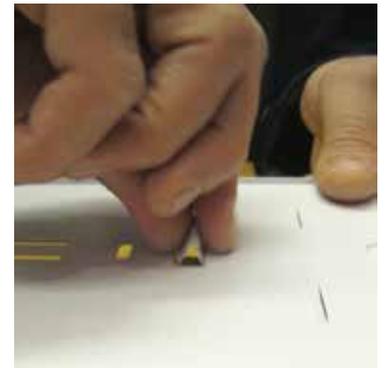

***Caution note:** The LED board and sheet metal board tray lance must be aligned with the LED board mounting holes so not to cause damage to the electrical trace of the LED board – if the LED board mounting holes are located inside of the LED boards electrical trace it is important to place a protective mylar sleeve, sil-pad, or thermal tape under or over the lance to protect the LED board from damage.



CITADEL LED Boards & Clips

SLP Lighting

1400 South Old Highway 141, Fenton, MO 63026 USA
Tel. 636-600-4084 - Fax 636-600-4108

West Coast 16423 Berwyn Road, Cerritos, CA 90703 USA
Tel. 1-562-404-1440 - Fax 1-562-404-4711

We reserve the right to make changes to materials or design.